
GENM2 8A 12V 2 Bank



On-Board Battery Charger



Charge Fully Drained Batteries Up To 120Ah/bank. Maintain All Battery Sizes.

Boats and a wide range of equipment. Perfect for harsh conditions.

Ultra-compact, rugged, and water proof, the fully-sealed charger can be mounted directly onto a variety of applications. Features **spark proof technology** and **reverse polarity protection**. Charges **2X faster** than ordinary chargers. Stay connected 24/7 with **zero overcharge**.



Firewall.

Multi-level safety barrier prevents unsafe and abnormal conditions.



Optimization.

Stabilizes internal battery chemistry for increased performance and longevity.



Maintenance Plus.

Keeps the battery fully charged without over-charging, indefinitely.



Energy Save.

Minimizes energy consumption when full power is not needed.



Interactive.

Alters the charging process based on organic battery feedback.



Safe.

Protects against reverse polarity, sparks, over-charging, overcurrent, open-circuits and overheating.



Recovery.

Applies a high-voltage pulse charge when low-voltage, sulfation, or lost capacity is detected.



Rugged.

Dirt, water, UV, impact and crush resistant.



Ignition Protected.

Non-ignited and temperature controlled for safe and worry-free operation.

Charge 12V Batteries Up To 120Ah/bank. Maintain All Battery Sizes.








Understanding LED Lights LED Explanation If a Reverse Polarity condition exists, the ORANGE ERROR LED Orange will illuminate. This ERROR condition will be displayed whether Solid the charger is plugged in or disconnected from an AC power Reverse Polarity source. Reverse the battery connections to fix this ERROR. When the battery is charging, the CHARGE LED will be illuminated Red RED. The CHARGE LED will remain a solid RED color (not blinking) Solid If an ERROR condition exists, the Charge LED(s) will flash, and/or Charging until the battery is fully charged. ΑII the ERROR LED with illuminate and/or flash. There are several Flashing reasons an ERROR condition could exist. For help troubleshooting Error Condition ERROR conditions, see the section entitled TROUBLESHOOTING. When the battery is fully charged, the CHARGE LED will be Green illuminated GREEN. The CHARGE LED will remain a solid GREEN Red/Green When no battery is connected, the LED lights will alternate between Solid color (not blinking) until either the battery charger is disconnected RED and GREEN. Fully Charged Alternating or the battery becomes discharged. Standby

Technical Specifications					
Input Voltage AC:	110-120 VAC, 50-60Hz	Type of Batteries:	12V Lead-Acid		
Working Voltage AC:	70-130 VAC, 50-60Hz	Battery Chemistries:	Wet, Gel, MF, AGM		
Nominal Voltage:	12VDC x 2	Battery Capacity:	20-120Ah;		
Efficiency:	90% Approx.		Maintains All Battery Sizes		
Charging Voltage:	14.4V	Housing Protection:	IP68		
Back Current Drain:	<5mA	Cooling:	Natural Convection		
Ripple:	<2%	Dimensions (LxWxH):	7.9 x 5.5 x 2.2 Inches		
Charger Type:	8 Step, Fully Auto., Switch-Mode	Weight:	5.8 Pounds		

Charging Steps

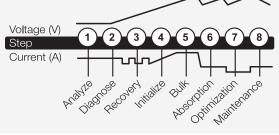



What's In The Box

- GENM2 Smart Charger
- Mounting Screws
- User Guide and Information Guide & Warranty

2 Bank 8A



Charging Times					
Battery Size (Ah)	Approx. Time (Hrs)	70	8.7		
20	2.5	80	10.0		
30	3.7	90	11.2		
40	5.0	100	12.5		
50	6.2	110	13.7		
60	7.5	120	15.0		

Retail Packaging:

Dimensions: 9.92"x5.08"x7.95" Weight: 6.11lbs UPC: 0-46221-12073-8 Inner Carton:

Dimensions: 10.24"x8.35"x5.51"

Weight: 6.53lbs



Master Carton:

Dimensions: 17.52"x10.94"x12.05" Weight: 27.43lbs Quantity: 4 UCC: 10046221120735

Units Per Pallet: 108 Units

Intertek 4001276








0.2in (4.1mm)

0.1in (2mm)

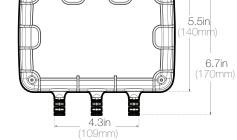

7.8in

CONFORMS TO UL STD. UL1236 CERTIFIED TO CSA STD. C22.2 No.107.2

AC Cable: 72in DC Cable: 78in



2.4in (60mm)